

# Cartridge alignment protractor

Universal two-point · Baerwald (Löfgren A) · IEC groove radii

null points 66.0 / 120.9 mm

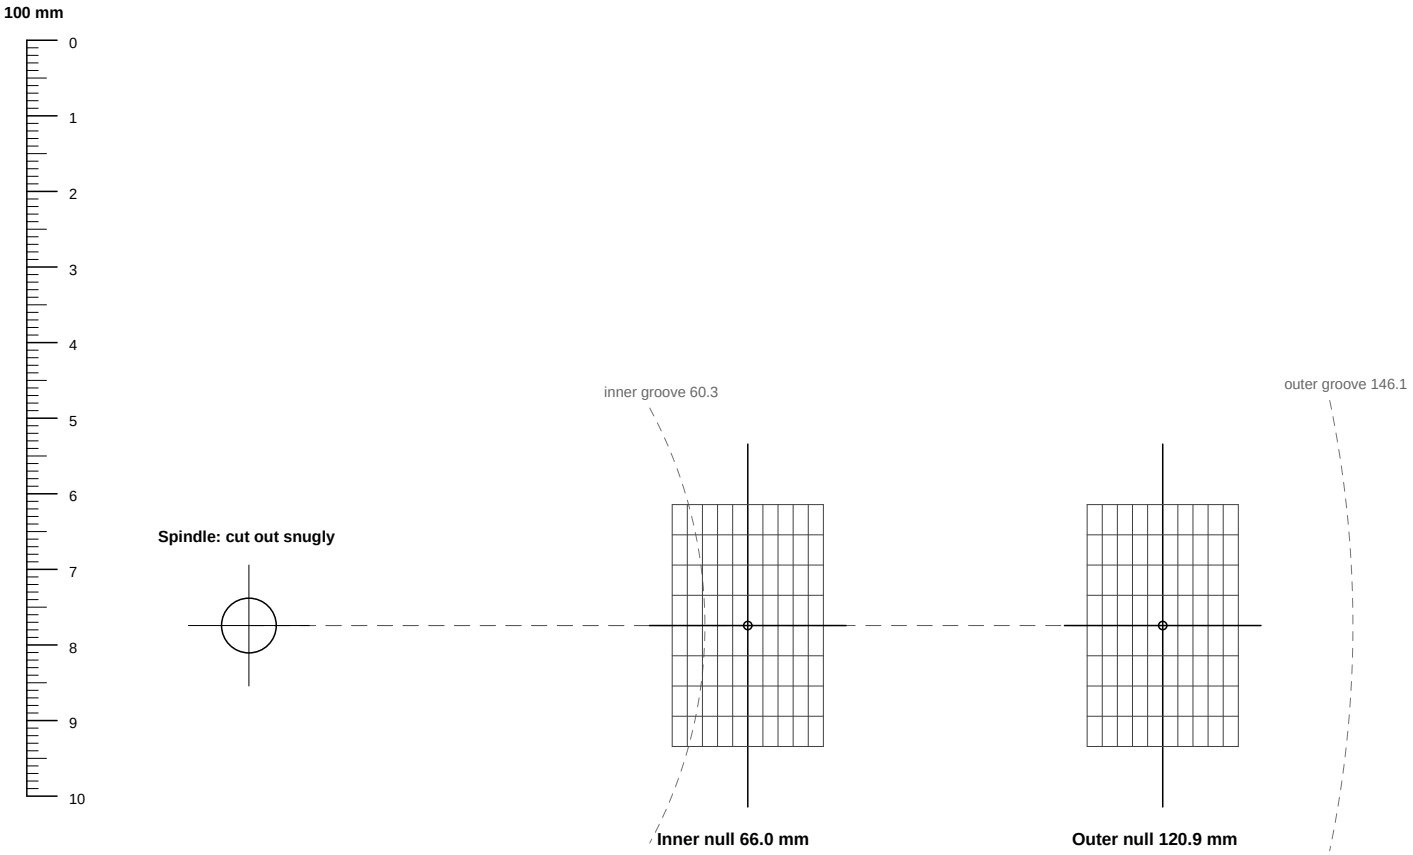


Scale check: a bank card or ID card covers this box exactly. If it does not, print again at 100 % ("Actual size").

1. Print at 100 % and check the scale with a card or the rulers.
2. Cut the spindle hole slightly small and press the sheet onto the spindle, on the mat.
3. Balance the arm and set the tracking force first.
4. Lower the stylus on the outer null point and twist the cartridge until the cantilever runs parallel to the long lines.
5. Do the same on the inner point. If the cantilever is not parallel there too, slide the cartridge and repeat both.
6. Tighten the screws evenly and check both null points again.